INSIGNIA™

Quick Setup Guide
HD Radio™ Boombox /iPod/iPhone Dock/CD I NS-BHDIP01

Congratulations on your purchase of a high-quality Insignia product. Your HD Radio™ Boombox/iPod /iPhone Dock / CD is designed for reliable and trouble-free performance. Use this guide for initial setup. See your *User Guide* for more information.

Package contents

- HD Radio™ Boombox /iPod/iPhone Dock/CD
- AC power adapter
- *User Guide*
- *Quick Setup Guide*

Made for iPod iPhone

"Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to an iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

Features

Front

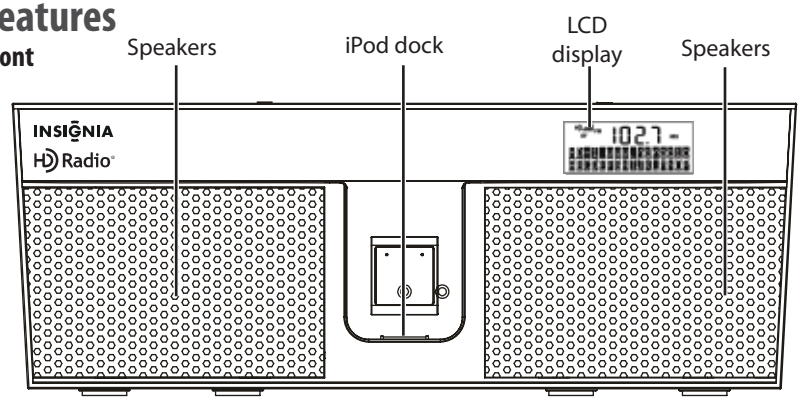

Back

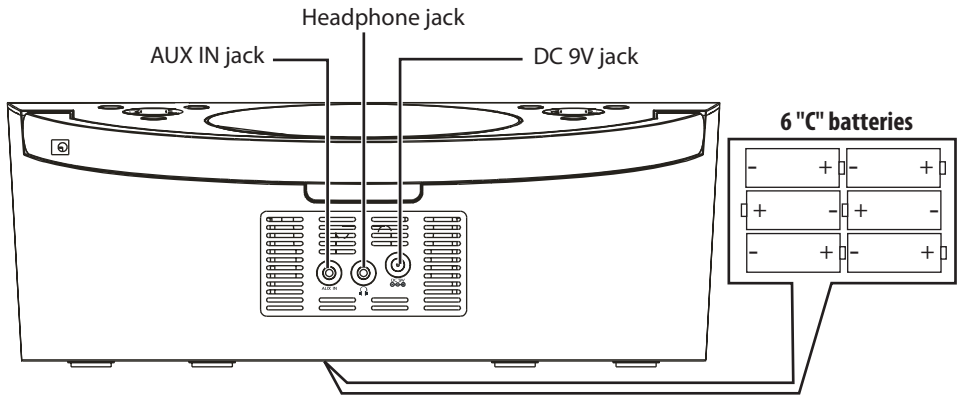

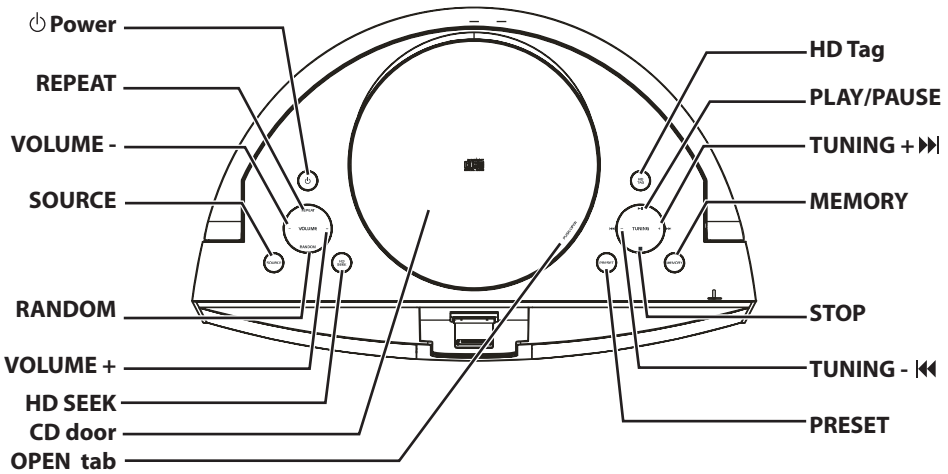

Introduction

Please read these instructions carefully before using this product and retain them in a safe place for future reference.

Power Supply

This product can be powered by either the included AC adapter (100/240V, 50-60Hz), or by six "C" size alkaline batteries.

Using batteries

1 Open the battery compartment on the bottom of your boom box.
2 Insert 6 "C" size alkaline batteries (not supplied) into the battery compartment, observing the correct polarity as indicated inside the battery compartment.
3 Close the battery compartment.

Notes: Ensure the compartment cover is securely fitted.When you replace the batteries, make sure you replace them all at the same time and with the same type of battery. If the product is not to be used for an extended period of time, the batteries should be removed to prevent any possible damage to the product from corrosive leakage which will invalidate the warranty. When the batteries reach 20% of capacity, a low battery icon flashes to let you know to change batteries.

Using AC

1 Connect the AC power adapter cord to the DC 9V jack on the back of your boom box.
2 Plug one end of the AC power adapter cord into the DC 9V jack on the back of your boom box. Plug the other end into an AC power outlet.

Powering your boom box

1 Press the POWER button to turn the boom box on.
2 Press POWER again to turn the boom box off when finished listening.

Controlling the volume

Press the **VOLUME +/-** buttons to the desired level.

Listening to an external audio device

1 Using an audio cable with a 3.5 mm stereo plug (not provided), connect the external audio equipment to the AUX IN jack on the back of your boom box.
2 Repeatedly press the **SOURCE** button until AUX appears in the display. Audio plays through the speakers.

Using headphones

Use headphones with a 3.5 mm plug (you may need to buy an adapter if your headphones are different). The speakers are automatically switched off when the headphones are being used.

Caution: Listening to high volume sound for long periods of time can damage your hearing.

FCC Part 15

This device complies with Part 15 of the FCC Rules. Operation of this product is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply within the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

FCC warning

Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

Canada ICES-003 statement

This Class B digital apparatus complies with Canadian ICES-003.

INSIGNIA™

Quick Setup Guide
HD Radio™ Boombox / iPod/iPhone Dock/CD I NS-BHDIP01

Selecting the mode (source)

To select the mode

- Press **SOURCE** repeatedly on the top of your boom box to select **TUNER**, **CD**, **iPod** or **AUX**. The source you select appears on the display.

Using Tuner mode

Tuner mode is the default mode on your boom box and is selected when you turn your boom box on.

To tune to a station:

- Press ⏭/**TUNING +** or ⏮/**TUNING-** on the top of your boom box. Your radio tunes to the next or previous frequency.
- Press and hold ⏭/**TUNING +** or ⏮/**TUNING-** on the top of your boom box for more than one second. Your radio searches for the next or previous clear radio station.
- Press **HD SEEK** on the top of your boom box. Your radio searches for the next clear HD Radio™ station.
- Press **PRESET** on the top of your boom box to go to the next preset station.

Listening to HD Radio™ broadcasts

If an FM station is broadcasting a Radio signal, the HD logo, "FM," the frequency, and the signal strength is shown on the display. The station information, including the station call letters, is shown on the top information line of the display. The artist and song name are shown on the bottom information line of the display.

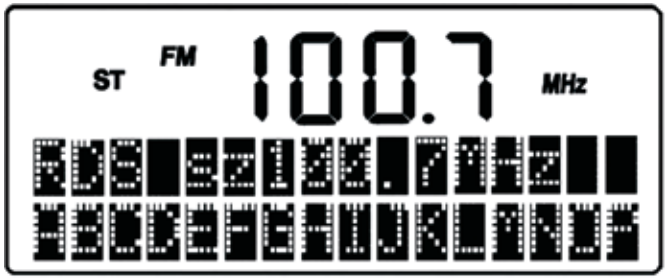

If the information is too long for the display, it scrolls across the display. If you find several HD Radio™ stations on the current frequency, the first HD Radio station indicates "HD-1" on the display, and the information shown relates to that station. Press ⏭/ **TUNING +** or ⏮/ **TUNING-** to select the next higher or lower HD Radio™ multicast station.

Using the CD player

To use the CD player:

1 Press **SOURCE** repeatedly on the top of your boom box to select **CD**, or press the **OPEN** tab on the top of your boom box, then lift the CD door to open it. "CD" appears on the display and "OPEN" is shown on the bottom information line.

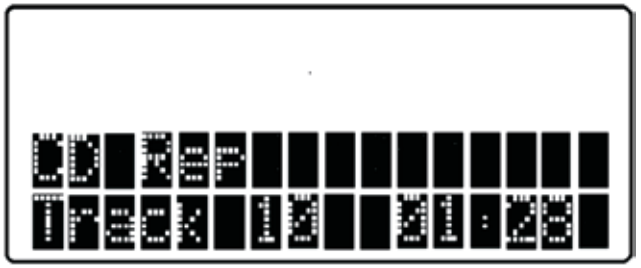

2 Place a CD on the spindle and close the CD door. "READING" flashes on the display and the contents of the disc are scanned. The total number of tracks is then shown on the bottom information line of the display. The CD automatically begins playback

Note: If the door is opened during playback, playback stops immediately and the program is cleared and any repeat mode setting is reset..

3 Control CD playback as follows:

- Press ⏯ **PLAY/PAUSE** to begin playback. Press again to pause playback. Press again to resume playback.
- Press ■ **STOP** to stop playback.
- Press ⏭ to skip to the next track. If the CD is playing, your boom box skips to the next track and starts playing. If the CD is stopped, your boom box skips to the beginning of the next track.
- Press ⏮ once to skip to the beginning of the current track. If the CD is playing, it begins playing the track again. If the CD is stopped, your boom box skips to the beginning of the previous track.
- Press ⏮ twice to skip to the beginning of the previous track. If the CD is playing, it begins playing the track.
- Press ⏭ and hold to fast forward. Release to stop the search.
- Press ⏮ and hold to fast reverse. Release to stop the search.
- Press **REPEAT** once to repeat the current track. "***CD Rep one***" appears on the display.
- Press **REPEAT** twice to repeat the entire CD. "***CD Rep all***" appears on the display. To return to normal playback, press **REPEAT** until the "Rep" icon disappears from the display.

  Press ■ **STOP** to stop playback during Repeat mode. Press ■ **STOP** again to cancel Repeat mode.

Using the iPod/iPhone dock

To use the iPod/iPhone dock:

1 Move the spring aside and insert your iPod or iPhone into the iPod/iPhone dock on the front of your boom box when the iPod is playing. Your boom box switches to iPod mode automatically and the iPod icon " " appears on the display.

Notes: If your iPod or iPhone is not detected by the boom box, the icon blinks.

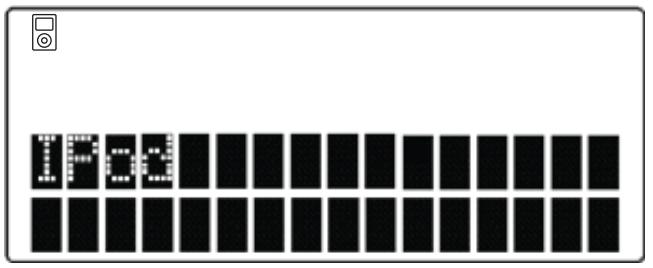

If there are files of proper format on your iPod/iPhone, they start playing back from the point playback was stopped or paused.

2 Control iPod playback as follows:

- Press ⏯ **PLAY/PAUSE** to start playback. Press ⏯ **PLAY/PAUSE** again to pause or stop playback. Press it again to resume playback.
- To skip to the next or a previous track during playback, press ⏭ **/ TUNING +** or ⏮ **/ TUNING-** on the top of your boom box repeatedly until the desired track is found. The selected track is played from the beginning.
- To search for a part of a track during playback, press and hold ⏭**/TUNING +** or ⏮**/ TUNING-** on the top of your boom box for more than two seconds and release it when the point in the track you want to listen to is found.
- To turn on Repeat mode during playback, press **REPEAT** repeatedly to cycle through the repeat options as follows:

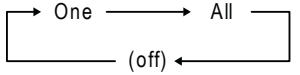

Note: If the iPod/iPhone is set to repeat one song, the Repeat One icon ( ) appears in the iPod/iPhone's display. If the iPod/iPhone is set to repeat all songs, the Repeat icon ( ) appears in the iPod/iPhone's display.

- To turn on Random mode during playback, press **RANDOM** repeatedly to cycle through the shuffle modes as follows:

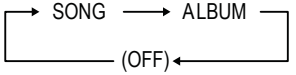

Note:

- If you select "SONG," the iPod/iPhone shuffles songs within the list you choose to play.
- If you select "ALBUM," the iPod/iPhone plays all the songs on an album in order, and then randomly selects another album in the list and plays through it in order.
- During shuffle playback, the shuffle icon ( ) appears on the iPod/iPhone's display.

90 Day limited warranty. Visit www.insigniaproducts.com for details. For customer service, call: 877-467-4289 (U.S./Canada markets). We're here for you at www.insigniaproducts.com

© 2011 BBY Solutions, Inc., Inc. All rights reserved. INSIGNIA is a trademark of BBY Solutions, Inc. Registered in some countries. All other products and brand names are trademarks of their respective owners.